## 5 Command Centre connections

USB	Connected to the Tap.
Boiling out	Red silicone tube from tap. Cut to length.
Chilled out	(BC, C) Blue silicone tube from tap, (BCS, CS, BA) Blue JG pipe from tap. Cut to length.
Vent	Clear silicone tube from tap. Cut to length.
Sparkling out	White JG pipe from tap. Cut to length.

6 Cleaning and general maintenance

Wipe surfaces with a damp cloth and then wipe dry with a clean, dry cloth. Do not use disinfectant sprays without wiping dry afterwards.



Zenith Heaters Limited

IRD/GST No. 95 640 729 18 Kawakawa Place, Westgate, Auckland 0814 New Zealand Ph +(64 9) 838 8612 Free Call 0800 558 055

zenithwater.co.nz

Installation instructions

# Zenith HydroTap



Arc Plus & Cube Plus B, BA, BC, BCS, CS, C





#### Using these instructions

Please refer to all safety and installation requirements detailed in the Quick start guide provided with the HydroTap Command Centre, and HydroTap Command Centre installation instructions found online, prior to installation of, or any change to, the complete system.





Read the instructions

Before commencing the installation, download & read the HydroTap Command Centre installation instructions

#### Tools needed for tap installation

In addition to normal tools, the following (or equivalent equipment) will be required, (not supplied).

- 35mm diameter sheet metal hole punch for sinks.
- 35mm diameter hole saw for worktops.
- Tube spanner for fixing the tap assembly.



Be aware of the risks of hazards which could cause harm when using tools. Assess the risks before starting the installation.

#### Water supply pressure requirements

	Min - Max pressure, kPA (bar)
HydroTap	170 (1.7) - 700 (7.0)
Sparkling HydroTap	250 (2.5 ) - 700 (7.0)
Booster	200 (2.0) - 700 (7.0)




### **Positioning**

 
Position the tap such that it dispenses into the sink bowl with clearance for a cup or tea pot.



- Ensure that taps are positioned to minimise the risks of scalding by dispensing boiling water while using the tap.
- All tubes must have constant fall.
  Ensure there are no kinks or sags.


Position Command Centre and tap as close together as possible. See below.

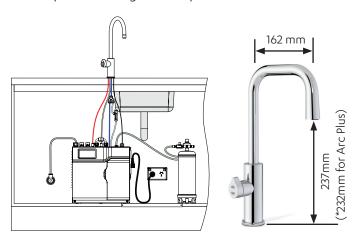



- Cut a Ø35mm hole in the worktop / sink.
- Make sure the tap location will allow the tap spout to drain into the sink.



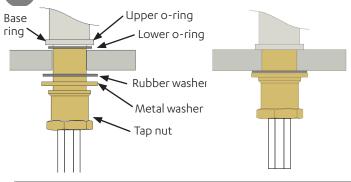

4

## Fit the tube kit

